

Quick Start Remote Guide

Program

When in the MUSIC VIZ or MIDI modes, this button returns to the preset programs.

MusicViz

Activates the Music Visualizer. Use the numbered buttons to choose settings for instrumental range.

Brightness/Gain

When the LIGHT FORMS mode is active, B/G controls the overall brightness. When the MUSIC VIZ is active, B/G controls the sensitivity of visualizer to the audio input.

Strobing Depth

Press repeatedly for: 50%, 75%, 100%, 75%, 50%, and back to default at 25%.

Strobing Frequency

Press repeatedly: Alpha (14 Hz), Theta (7 Hz), Delta (3.5 Hz), Theta, Alpha and back to default Variable (8-30 Hz).

MIDI


Prepares the equipment to be played as a MIDI instrument. Multiple Light Boxes/Projectors may also be synchronized via MIDI. See instructions.

Program Repeat

Program modes repeat by default. Press this button to run through all the program presets 1-9 in sequence. Press again to resume repeating.

All Colors On

Halts the running program and turns all colors on at FULL brightness.

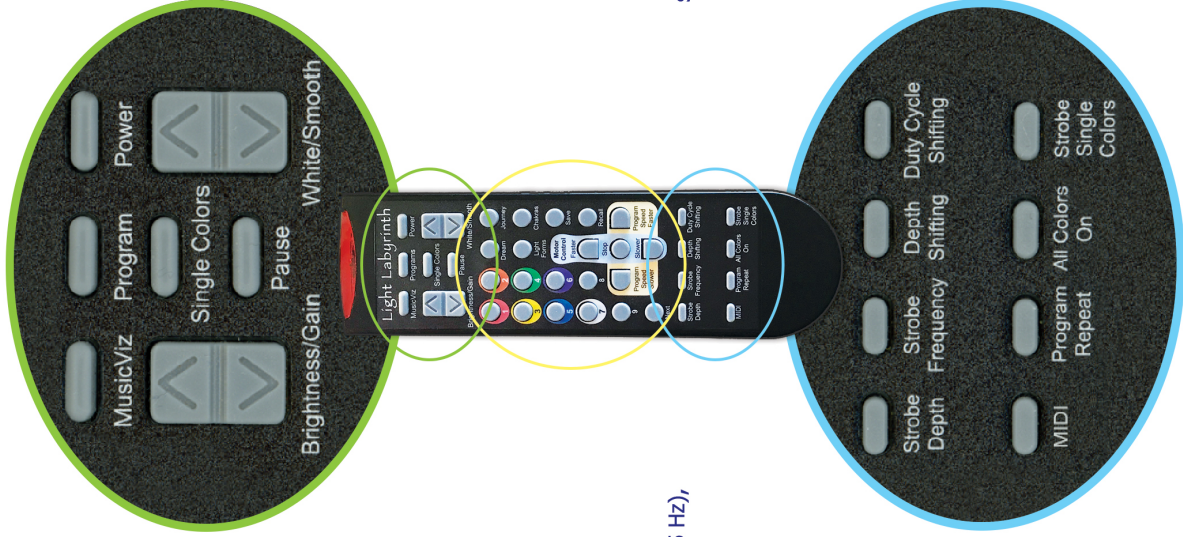

Power
Powering ON initiates Dream Sequence 1.
OFF returns all setting to their default values.

Single Colors
Press for SINGLE COLORS, using the color-coded buttons to select specific colors. Press 8 to start complex color blending. Select a color using the color-coded buttons, then fade in/out manually using Brightness. Press 9 to exit color blending.

Pause
Press this button to pause the current program. Press again to resume program. Press Pause to freeze transitions when cross fading in SINGLE COLOR mode.

White/Smooth
Hold this button to mix white light into a program. In MUSIC VIZ mode, use this to adjust the visual smoothness with which the music is rendered into light.

Duty Cycle Shifting
Changes duty cycle (light/dark ratio) of strobing light. There are (3) settings. Press once for 90%/10% ratio, 2x for 10%/90%, and 3x returns to 50%/50%.

Depth Shifting
Turns depth shifting On, and returns to Off, which changes the intensity of the strobing.

Strobe Single Colors
After Single Colors (or while custom color mixing), Strobe Single Colors button turns strobing On/Off.

Quick Start Remote Guide

1-9/Color Buttons

This button performs different functions depending upon the currently active feature. In addition to representing Single Colors, buttons 1-9 also contain program presets for Dream, Journey, Light Forms, and Chakras.

If DREAM mode is active, you may choose among the (9) preset **non-strobing** light forms.

If LIGHT FORMS mode is active, you may choose among the (9) preset **strobing** light forms.

If CHAKRAS mode is active, you may choose among the (6) preset sequences.

If JOURNEY is active, preset (1) is a looping sequence of non-strobing lighting effects, a fascinating journey with ambient color mixing that provides a serene meditation.

If SINGLE COLORS or color blending is active, the color-coded buttons allow you to select among each of the (7) individual colors. Press 8 for color blending, press 9 to exit color blending.

If SAVE or RECALL are active, you may set or choose among your (9) favorites.

If the MUSIC VIZ is active, you may choose visualizer settings appropriate for the range of input: 1-music, 2-piano, 3-guitar, 4-voice.

Next

This button performs different functions depending upon the currently active feature:

If DREAM or LIGHT FORMS is active, advance to the next preset.
If CHAKRAS is active, skip to the next color/chakra.
If SINGLE COLORS is active, advance to the next color.

Dream
Powering ON initiates Dream Sequence 1 "Serenity". This feature cycles thru (9) non-strobing compositions. Select compositions 1-9 or forward using NEXT.

Journey
Currently one composition combining chakras, non-strobing, and (3) light strobing sequences blended into a 25 minute meditation.

Light Forms
This button initiates Light Forms Sequence 1. Select compositions 1-9 or forward using NEXT.

Chakras
This button initiates Chakras Sequence 1. Press Chakras, choose from (6) compositions, then set the number of minutes for each color.

Save/Recall
To save a favorite (combination of strobing or program features, or a custom color mix), Press SAVE followed by the number 1-9 where you want to save it. To recall a favorite, press RECALL followed by 1-9 to activate favorite.

Program Speed
These buttons allow you to change the rate at which the colors crossfade (both strobing & non-strobing programs). Pressing the beige SLOWER/FASTER buttons will step up and down 10-tiered levels. The slowest speed is extremely slow.

Motor Control
Turntable feature for these buttons are no longer available.

